e2V

ADC EV10AS152A Evaluation Board

User Guide

Table of Contents

Section	1	
Introduct	tion	1-1
1.1	Scope	1-1
1.2	Description	1-1
Section	2	
Hardwar	re Description	2-1
2.1	Board Structure	2-1
2.2	Analog Inputs/Clock Input	2-2
2.3	Digital Output	2-3
2.4	Reset Lines	2-5
Section	3	
Operatin	ng Characteristics	3-1
3.1	Introduction	3-1
3.2	Operating Procedure	3-1
3.3	Electrical Characteristics	3-2
3.4	Digital Output Coding	3-4
Section	4	
Software	e Tools	4-1
4.1	Overview	4-1
4.2	Configuration	4-1
4.3	Getting Started	4-1
4.4	Operating Modes	4-7
Section	5	
Applicati	ion Information	5-1
5.1	Introduction	5-1
5.2	Analog Inputs	5-1
5.3	Clock Inputs	5-1
5.4	Digital Outputs	5-1
5.5	ADC Functions	5-2
5.6	DMUX Functions	5-2
5.7	Diode for Die Junction Temperature Monitoring	5-4
5.8	Test Bench Description	5-6
Section	6	
Package	e Information	6-1
6.1	Thermal Characteristics	6-1

Section 7 Ordering Information7-1			
Section		0.4	
Appena	ix	8-1	
8.1	EV10AS152A-EB Electrical Schematics	8-1	
8.2	EV10AS152A-EB Board Layers	8-8	

e2V

Section 1

Introduction

Preamble

This document has to be read with the latest version of the datasheet that can be found on e2v.com website.

1.1 Scope

The ADC EV10AS152A-EB Evaluation Kit is designed to facilitate the evaluation and characterization of the different versions of EV10AS152A ADC with 1:2/4 DMUX up to its full power input bandwidth.

The ADC EV10AS152A-EB Evaluation Kit includes:

- The EV10AS152A with 1:2/4 DMUX Evaluation board including one version of the EV10AS152A ADC device soldered on the board
- Six SMA caps for CLK, CLKN, VIN, VINN, DRR and ASYNCRST signals
- Six jumpers DMUX function settings (RS, BIST, DRTYPE, SLEEP, STAGG),
 CLKTYPE jumper is not used
- 3-wire serial link to control ADC functionality

The user guide uses the EV10AS152A Evaluation Kit as an evaluation and demonstration platform and provides guidelines for its proper use.

1.2 Description

The ADC EV10AS152A Evaluation board is very straightforward as it only implements the EV10AS152A ADC/DMUX device, SMA connectors for the sampling clock, analog inputs and reset inputs accesses and HE14 double row 2.54 mm pitch connectors compatible with high speed acquisition system probes.

To achieve optimal performance, the ADC EV10AS152A-EB Evaluation board was designed in a 8-metal-layer board with RO4003 200 µm and FR4 HTG epoxy dielectric materials. The board implements the following devices:

- The ADC EV10AS152A with 1:2/4 DMUX Evaluation board with one version of the EV10AS152A ADC soldered on the board
- Six SMA caps for CLK, CLKN, VIN, VINN, DRR and ASYNCRST signals
- Six jumpers DMUX function settings (RS, BIST, DRTYPE, SLEEP, STAGG), CLKTYPE jumper is not used
- 3-wire serial link to control ADC functionality via RS232
- 2.54 mm pitch connectors for the digital outputs, compatible with high speed acquisition system probes

EV10AS152A-EB User Guide 1-1

e2v semiconductors SAS 2012 1108A-BDC-12/12


- Banana jacks for the power supply accesses and the die junction temperature monitoring functions (2 mm)
- Potentiometers for the DMUX functions

The board is composed of eight metal layers for signal traces, ground and power supply layers, and seven dielectric layers featuring low insertion loss and enhanced thermal characteristics for operation in the high frequency domain.

The board dimensions are 220 mm x 240 mm.

The board comes fully assembled and tested, with one version of the EV10AS152A ADC installed.

Figure 1-1. ADC EV10AS152A-EB Evaluation Board Simplified Schematic

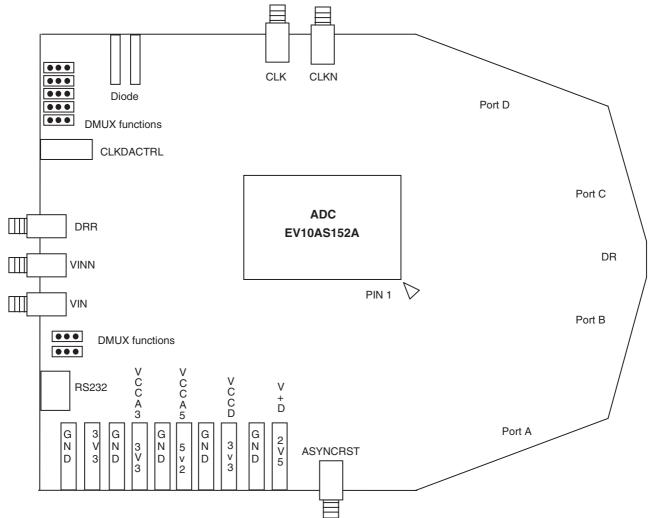

As shown in Figure 1-1, different power supplies are required:

- V_{CCA5} = 4.9V analog positive power supply
- V_{CCA3} = 3.25V analog positive power supply
- V_{CCD} = 3.3V digital positive power supply
- V_{PLUSD} = 2.5V digital output power supply
- 3.3V power supply for the board functions

e2V

Section 2

Hardware Description

2.1 Board Structure

In order to achieve optimum full speed operation of the ADC EV10AS152A with 1:2/4 DMUX, a multilayer board structure was retained for the evaluation board. Eight copper layers are used, respectively dedicated to the signal traces, ground planes, power supply planes and DC signals traces.

The board is made in RO4003 200 μm and FR4 HTG epoxy dielectric materials. Table 2-1 gives a detailed description of the board's structure.

Table 2-1. Board Layer Thickness Profile

Layer	Characteristics		
Layer 1 Copper layer	Copper thickness = 40 μ m AC signals traces = 50Ω microstrip lines DC signals traces (DMUX functionality etc.)		
Layer 2 RO4003 dielectric layer (Hydrocarbon/wovenglass)	Layer thickness = 200 µm Dielectric constant = 3.4 at 10 GHz -0.044 dB/inch insertion loss at 2.5 GHz -0.318 dB/inch insertion loss at 18 GHz		
Layer 3 Copper layer	Copper thickness = 35 μm Upper ground plane = reference plane 50Ω microstrip return		
Layer 4 FR4 HTG/dielectric layer	Layer thickness = 170 μm		
Layer 5 Copper layer	Copper thickness = 35 μm Power planes = V _{CCA5}		
Layer 6 FR4 HTG/dielectric layer	Layer thickness = 200 μm		
Layer 7 Copper layer	Copper thickness = 35 μ m Power planes = V_{CCD} and 3.3V		
Layer 8 FR4 HTG/dielectric layer	Layer thickness = 170 μm		

EV10AS152A-EB User Guide 2-1

Table 2-1. Board Layer Thickness Profile (Continued)

Layer 9 Copper layer	Copper thickness = 35 μ m Power planes = V_{CCA3}
Layer 10 FR4 HTG/dielectric layer	Layer thickness = 200 μm
Layer 11 Copper layer	Copper thickness = $35 \mu m$ Power planes = V_{PLUSD}
Layer 12 FR4 HTG/dielectric layer	Layer thickness = 170 μm
Layer 13 Copper layer	Copper thickness = 35 µm Ground plane = reference plane (identical to layer 3)
Layer 14 FR4 HTG/dielectric layer	Layer thickness = 200 μm
Layer 15 Copper layer	Copper thickness = 40 µm DC signals traces and Serial Interface (AVR) signals Ground plane

The board is 1.6 mm thick.

The clock, analog input, reset and digital data output signals occupy the top metal layer while the ADC and DMUX functions are located both on the top.

The ground planes occupy layer 3, 13 and 15 (partly).

Layer 5, 7, 9 and 11 are dedicated to the power supplies.

2.2 Analog Inputs/Clock Input

The differential active inputs (Clock, Analog) are provided by SMA connectors.

Reference: VITELEC 142-0701-8511

Special care was taken for the routing of the analog input and clock input signals for optimum performance in the high frequency domain:

- 50Ω lines matched to ±0.1 mm (in length) between V_{IN} and V_{INN} and between CLK and CLKN
- 50 mm max line length
- 1.27 mm pitch between the differential traces
- 400 µm line width
- 40 µm thickness
- 850 µm diameter hole in the ground layer below the V_{IN}, V_{INN}, CLK and CLKN ball footprints

Figure 2-1. Figure 2-1. Board Layout for the Differential Analog and Clock Inputs

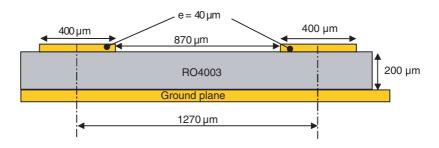


Figure 2-2. Differential Analog Inputs Implementation


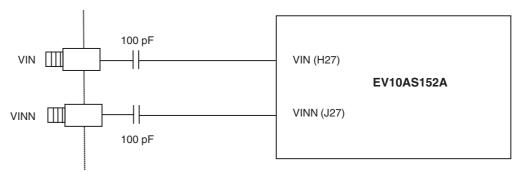


Figure 2-3. Differential Clock Inputs Implementation

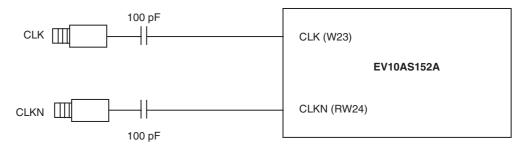


2.3 Digital Output

The digital output lines were designed with the following recommendations:

- 50Ω lines matched to ±0.5 mm (in length) between signal of the same differential pair
- 80 mm max line length
- ±1 mm line length difference between signals of two ports
- ±1.5 mm max line length difference between all signals
- 770 µm pitch between the differential traces
- 370 µm line width
- 40 µm thickness


EV10AS152A-EB User Guide 2-3

Figure 2-4. Board Layout for the Differential Digital Outputs

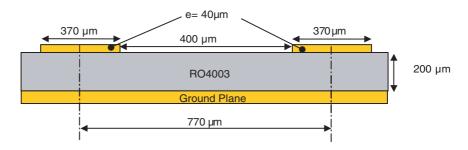

The digital outputs are compatible with LVDS standard. They are on-board 100Ω differentially terminated as described in Figure 2-5.

Figure 2-5. Differential digital Outputs Implementation

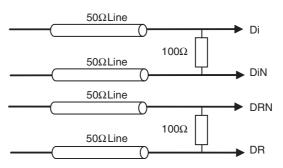

HE14 Double row 2.54 mm pitch connectors are used for the digital output data. The upper row is connected to the signal while the lower row is connected to Ground, as illustrated in Figure 2-6.

Figure 2-6. Differential Digital Outputs 2.54 mm Pitch Connector (Example Port A)

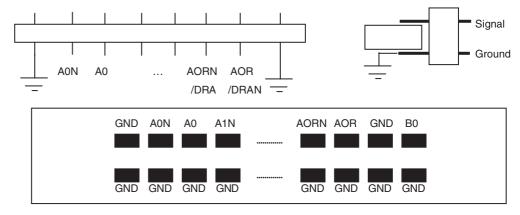


Figure 2-7. Differential Digital Clock Outputs 2.54 Mm Pitch Connector




2-4 1108A-BDC-12/12

2.4 Reset Lines

The reset line (DRR and ASYNCRST) were designed with the following recommendations:

- 50Ω lines
- 80 mm max line length
- 430 µm line width
- 40 µm thickness

Figure 2-8. Board Layout for the Single Reset Lines

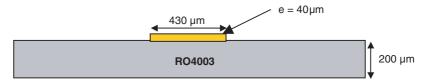

EV10AS152A-EB User Guide 2-5

Hardware Description

2-6 EV10AS152A-EB User Guide

Section 3

Operating Characteristics

3.1 Introduction

This section describes a typical configuration for operating the evaluation board of the ADC EV10AS152A with 1:2/4 DMUX.

The analog input signal can be entered either in differential or single ended. Refer to the datasheet for the impact of driving analog input in single or in differential. The clock input signal must be differentially driven.

ADC EV10AS152A clock inputs should be fed with balanced signals (use a balun or hybrid junction to convert a single signal to a differential signal).

3.2 Operating Procedure

1. Connect the power supplies and ground accesses through the dedicated banana jacks.

 $V_{CCA5} = 4.9V, V_{CCA3} = 3.25V, V_{CCD} = 3.3V, V_{PLUSD} = 2.5V,$

 V_{CCA3} = 4.9V, V_{CCD} = 3.3V and 3.3V have separated planes but can be reunited via a short-cable.

2. Connect the clock input signals. Use a low-phase noise high frequency generator.

The clock input level is typically 1 dBm (on 100Ω differential input). The clock frequency can range from 500 MHz up to maximum speed.

3. Connect the analog input signal. Use a low-phase noise high frequency generator.

The analog input full scale is 500 mV peak-to-peak (±250 mV on each single ended input) around 0V (AC coupling). It is recommended to use the ADC with an input signal of –1 dBFS max (to avoid saturation of the ADC).

The analog input frequency can range from DC up to 5 GHz. At 5 GHz, the ADC attenuates the input signal by 3 dB.

4. Connect the high-speed acquisition system probes to the output connectors.

The digital data are differentially terminated on-board (100 Ω) however, they can be probed either in differential or in single-ended mode.

5. Connect the DMUX function jumpers:

All instrumentation and connectors are now connected.

- 6. Switch on the power supplies (No specific power supplies sequencing required during power on/off).
- 7. Turn on the RF clock generator.
- 8. Turn on the RF signal generator.

EV10AS152A-EB User Guide 3-1

- 9. Perform an asynchronous Reset (DRR active) on the device and maintain this Reset active.
- Perform an asynchronous Reset ((push button) ASYNCRST active) on the board.
- 11. Then, ASYNCRST inactive on the board.
- 12. DRR inactive on the device.
- 13. Started 3 Wire Serial interface (refer to Section 4)
- 14. Reset button allows to configure ADC (Mode 0)

3.3 Electrical Characteristics

Table 3-1. Absolute Maximum Ratings

Parameter	Symbol	Value	Unit
Analog 5.0V Power Supply voltage	V _{CCA5}	GND to 6.0	V
Analog 3.3V Power Supply voltage	V _{CCA3}	GND to 3.6	V
Digital 3.3V Power Supply Voltage	V _{CCD}	GND to 3.6	V
Output 2.5V Power Supply voltage	V _{PLUSD}	GND to 3.0	V
Minimum Analog input peak voltage (with differential input)	V _{IN} or V _{INN}	2.0	٧
Maximum Analog input peak voltage (with differential input)	V _{IN} or V _{INN}	4.0	V
Maximum difference between V_{IN} and V_{INN} (with differential input)	IV _{IN} - V _{INN} I	2.0 (4 Vpp = +13 dBm in 100Ω)	V
Minimum Analog input peak voltage (with single ended input)	VIN with VINN = 50Ω to GND or VINN with VIN = 50Ω to GND	2.0	V
Maximum Analog input peak voltage (with single ended input)	V_{IN} with V_{INN} = 50 Ω to GND or V_{INN} with V_{IN} = 5 Ω to GND	4.0	V
Maximum amplitude on V_{IN} or V_{INN} (with single ended input)	IV _{IN} I or IV _{INN} I	(2 Vpp = +10 dBm in 50Ω)	V
Minimum Clock input peak voltage (with differential clock)	V _{CLK} or V _{CLKN}	1.5	V
Maximum Clock input peak voltage (with differential clock)	V _{CLK} or V _{CLKN}	4.0	V
Maximum difference between V_{CLK} and V_{CLKN} (with differential clock)	IV _{CLK} - V _{CLKN} I	1.5 (3 Vpp)	V
3WSI input voltage	SDATA, SLDN, SCLK, RESET	-0.3 to V _{CCA3} + 0.3	V
ADC Reset Voltage	DRR	-0.3 to V _{CCA3} + 0.3	V
DMUX function input voltage	RS, DRTYPE, SLEEP, STAGG, BIST	-0.3 to V _{CCD} + 0.3	V
DMUX Asynchronous Reset	ASYNCRST	-0.3 to V _{CCD} + 0.3	V
DMUX Control Voltage	CLKDACTRL	-0.3 to V _{CCD} + 0.3	V

Table 3-1. Absolute Maximum Ratings (Continued)

Maximum input voltage on DIODE	DIODE ADC	700	mV
Maximum input current on DIODE	DIODE ADC	1	mA
Max Junction Temperature	T _J	135	°C
Storage temperature	Tstg	-55 to 150	°C
ESD protection (HBM)		≥ 500 on ADC inputs	V
		500 on DMUX outputs	

Note: Absolute maximum ratings are limiting values (referenced to GND = 0V), to be applied individually, while other parameters are within specified operating conditions. Long exposure to maximum rating may affect device reliability.

All integrated circuits should be handled with appropriate care to avoid damages due to ESD. Damage caused by inappropriate handling or storage could range from performance degradation to complete failure, including reliability degradation.

Table 3-2. Electrical Characteristics for Supplies

Parameter	Test Level	Symbol	Min	Тур	Max	Unit		
POWER REQUIREMENTS	POWER REQUIREMENTS							
Power Supply voltages	1							
Analog 4.9V		V _{CCA5}	4.75	4.9	5.05	V		
Analog 3.25V		V _{CCA3}	3.15	3.25	3.35	V		
Digital 3.3V		V_{CCD}	3.15	3.3	3.45	V		
Output 2.5V		V_{PLUSD}	2.4	2.5	2.6	V		
Power Supply current in 1:2 DMUX	1							
Analog $V_{CCA5} = 4.9V$		I _{VCCA5}		150	190	mA		
Analog V _{CCA3} = 3.25V		I _{VCCA3}		850	990	mA		
Digital V _{CCD} = 3.3V		I _{VCCD}		350	430	mA		
Output V _{PLUSD} = 2.5V		I _{VPLUSD}		470	620	mA		
Power Supply current in 1:4 DMUX	1							
Analog V _{CCA5} = 4.9V		I _{VCCA5}		150	190	mA		
Analog V _{CCA3} = 3.25V		I _{VCCA3}		850	990	mA		
Digital $V_{CCD} = 3.3V$		I _{VCCD}		400	470	mA		
Output $V_{PLUSD} = 2.5V$		I _{VPLUSD}		490	650	mA		
Power Supply current in NAP and SLEEP mode	1							
Analog V _{CCA5} = 4.9V		I _{VCCA5}		110	150	mA		
Analog V _{CCA3} = 3.25V		I _{VCCA3}		560	800	mA		
Digital $V_{CCD} = 3.3V$		I _{VCCD}		130	150	mA		
Output $V_{PLUSD} = 2.5V$		I _{VPLUSD}		400	550	mA		
Power dissipation	1	P_D						
- 1:2 DMUX				5.8	7.4	W		
- 1:4 DMUX				6.0	7.6	W		
- NAP & SLEEP mode (1:4 or 1:2)				3.8	5.4	W		

3.4 Digital Output Coding

Table 3-3. Digital Output Coding

Differential				
Analog Input	Voltage Level	Digital Output		
		Natural Binary ⁽¹⁾	Binary 2's	Gray Coding ⁽¹⁾
		MSBLSB OR	Complement ⁽¹⁾	MSBLSB OR
			MSBLSB OR	
> 250.25 mV	>Top end of full scale + ½ LSB	0000000000 1	1000000000 1	0111111111 1
250.25 mV	Top end of full scale + ½ LSB	00000000000	10000000000	0111111111 0
249.75 mV	Top end of full scale - ½ LSB	0000000001 0	1000000001 0	0111111110 0
125.25 mV	3/4 full scale + ½ LSB	0011111111 0	101111111 0	0101111111 0
124.75 mV	3 / $_{4}$ full scale - 1 / $_{2}$ LSB	0100000000 0	1100000000 0	0001111111 0
0.25 mV	Mid scale + ½ LSB	0111111111 0	111111111 0	0011111111 0
–0.25 mV	Mid scale - ½ LSB	1000000000	0000000000	101111111 0
-124.75 mV	1/4 full scale + 1/2 LSB	101111111 0	0011111111 0	1001111111 0
−124.25 mV	¹ / ₄ full scale - ½ LSB	1100000000 0	0100000000 0	1101111111 0
–249.75 mV	Bottom end of full scale + ½ LSB	1111111110 0	0111111110 0	1111111110 0
–250.25 mV	Bottom end of full scale - ½ LSB	111111111 0	0111111111 0	111111111 0
<-250.25 mV	< Bottom end of full scale - ½ LSB	1111111111 1	0111111111 1	1111111111 1

MSB bit 9 and LSB bit 0.

Notes: 1. Refer to chap. 4.4.4 and 4.4.5 for selection between natural binary, binary 2's complement or Gray coding.

2. Be aware that code 0x000 is obtained for positive full scale analog input and code 0x3FF for negative full scale analog input.

e2V

Section 4

Software Tools

4.1 Overview

The ADC EV10AS152A evaluation user interface software is a C++ compiled graphical interface.

No license is required to run on a W98, NT, W2000, XP and Win7 PC.

The software uses intuitive push buttons and popup menus to write data from the hardware.

4.2 Configuration

Advised configuration for Win2000:


- PC Pentium >100 MHz
- Memory 24Mo
- For other versions of Windows OS, use the recommended configuration from Microsoft
- Two COM ports are necessary to use two boards simultaneously

4.3 Getting Started

Install the ADC EV10AS15x application on your computer by launching the EV10AS15x exe installer.

EV10AS152A-EB User Guide 4-1

Figure 4-1. Install Window

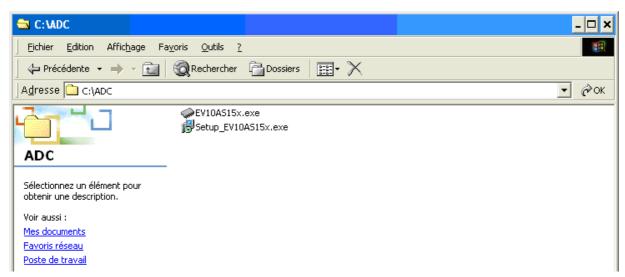

Start the Setup_EV10AS15x (v1.1.2)


Figure 4-2. EV10AS152A Application Set up Wizard Window



4-2 EV10AS152A-EB User Guide


Next step: Select Destination Directory.

Figure 4-3. EV10AS152A select Destination Directory Window

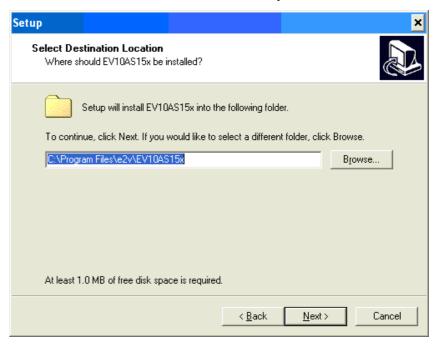

Next step: Start Menu Folder.


Figure 4-4. EV10AS152A select Start Menu Window

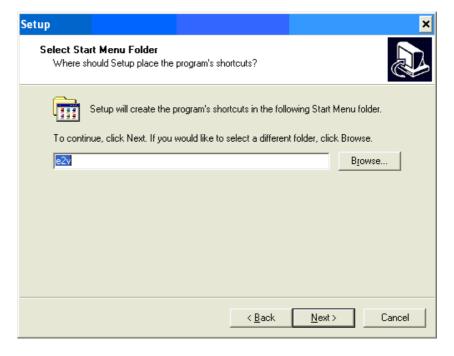

EV10AS152A-EB User Guide 4-3

Next step: verification of the install configuration.

Figure 4-5. EV10AS152A Ready to Install Window

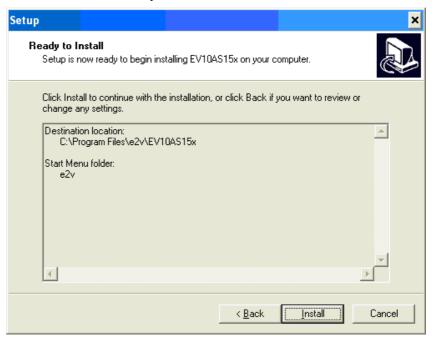


If you agree with the install configuration press Install.

Figure 4-6. EV10AS152A Application Setup Install Push Button



The software is completing installation.

Figure 4-7. EV10AS152A Completing Setup Wizard Window

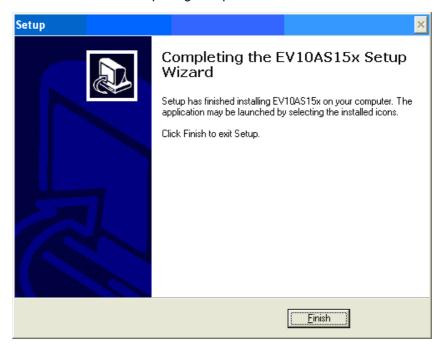

Now you can launch the ADC10Bit series software from its icon; the following screen will be displayed:

Figure 4-8. ADC EV10AS152A User Interface Window


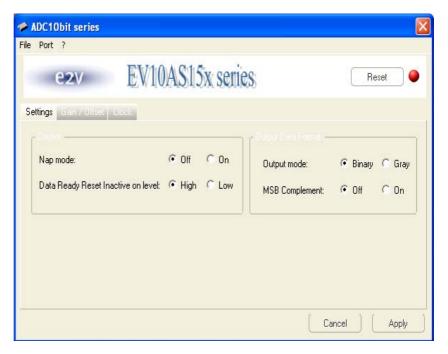


Figure 4-9. ADC10-bit User Interface Hardware Implementation

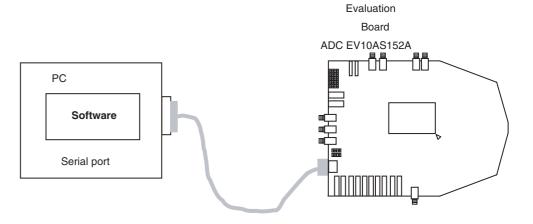


Use a RS 232 port to send data to ADC.

Connect the crossed DB9 9 (F/F) cable between your PC and your evaluation board.

EV10AS152A-EB User Guide 4-5

Figure 4-10. Crossed RS232 Cable

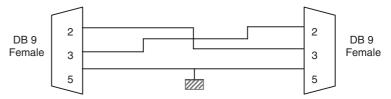

Serial Port Configuration:

■ Bit rate: 19200

■ Data coding: 8 bit

■ 1 start bit, 1 Stop bit

■ No parity check

4.3.1 Installation Software

At startup, the application automatically checks all RS 232 ports available on the computer and tries to find the evaluation board on them.

Figure 4-11. ADC EV10AS152A User Interface



The *Port* menu shows all available ports on your computer. The port currently used has a check mark on its left. By clicking another port item, the application will try to connect to an evaluation board via the selected port. If a board is successfully detected on the new port, the LED is green (or orange depending on the serial interface switch) and the new port gets the check mark. If the application is not able to find a board on this port, an error message is displayed and the LED turns to red.

4.3.2 Troubleshooting

If the ADC EV10AS152A evaluation board is not connected or not powered, a red LED appears on the right of the Reset button and the application is grayed

Figure 4-12. ADC EV10AS152A User Interface



Check the connection to the PC and restart the application.

If the serial interface is not active the LED appears in orange and the application is grayed too.

Figure 4-13. ADC EV10AS152A User Interface



Turn ON the switch on the demo board, the application should become available and the LED turns to green.

Troubleshooting:

- Check your rights to write in the directory
- Check for the available disk space
- Check that at least one RS232 serial port is free and properly configured.
- Check that the DB9 connector is properly inserted
- Check that all supplies are ON
- Check that the serial mode is active (green LED ON)

4.4 Operating Modes

4.4.1 Overview

The software provides a graphical user interface to configure the ADC.

Push buttons, popup menus and capture windows allows playing with:

- Control Mode.
- Switch analog and Switch clock
- Standby
- Gain
- Offset
- DDA

EV10AS152A-EB User Guide 4-7

Always click on Apply to validate any command

Each setting must be validated in its own tab.



Clicking on Cancel will restore last settings sent with Apply button.

Reset button allows to configure ADC (Mode 0)



4.4.2 Control Mode

The control mode allows controlling the NAP mode and Data Ready Reset Inactive mode.



4.4.2.1 NAP Mode

NAP mode configurable Off or On



4.4.2.2 Data Ready Reset Inactive on Level

Data Ready Reset is inactive on High level or on Low level



4.4.3 ADC Output Data Format (Binary-Gray)

ADC Output Data Format: Binary



ADC Output Data Format: Gray

Note: In this mode, MSB complement is not available.



4.4.4 ADC Output Data Format (MSB Complement)

ADC Output Data Format: MSB complement Off




ADC Output Data Format: MSB complement On

Note: Mode MSB complement is available if ADC output data format is binary

EV10AS152A-EB User Guide 4-9




4.4.5 ADC Gain Adjust ADC Gain adjustment is from -0.5 to 0.5 dB.

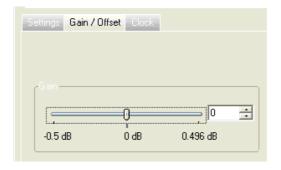

4.4.6 ADC Offset Adjust


ADC Offset adjustment is from -20 mV to 20 mV.

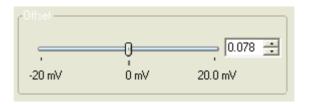


4-10

4.4.7 Sampling Delay Adjust

Sampling Delay Adjustment Off

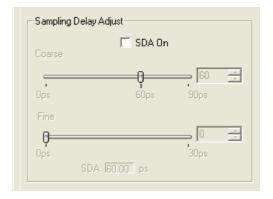


- Sampling delay adjustment On
- Coarse adjustment: 0 to 90 ps by step of 30 ps
- Fine adjustment: 0 to 30 ps by step of 0.118 ps
- Maximum delay: 120 ps

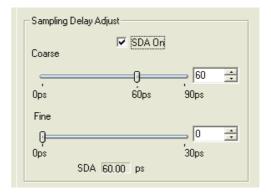

4.4.8 Advanced Setting: Logic Clock Adjustment


Internal logic clock adjustment 0 to 30 ps on Lsb register

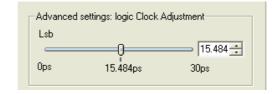

EV10AS152A-EB User Guide 4-11

4.4.9 Clock Duty Cycle (Track - Hold)

ADC Duty Cycle (Track-Hold): 40%-60% to 30%-70%

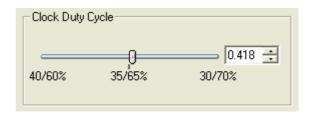


Note: Reset value 35%-65%

Section 5

Application Information

5.1	Introduction	For this section, refer also to the product chapter 4 of the datasheet.
5.2	Analog Inputs	The analog input can be entered either single ended or differentially. Refer to the datasheet to see the impact on dynamic performances.
		It is recommended to use a filter to optimize the dynamic performance and the spectral response of the ADC.
5.3	Clock Inputs	The clock inputs should be differentially driven using a balun or hybrid junction. The clock input is AC coupled.
5.4	Digital Outputs	The digital outputs (data and Data Ready) are LVDS compatible. $100\Omega\text{differential}$ termination is provided on-board.

Figure 5-1. Differential Digital Outputs Implementation

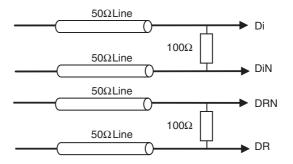

EV10AS152A-EB User Guide 5-1

5.5 ADC Functions

5.5.1 DRR (Data Ready Reset)

The Data Ready Reset signal is accessed via an SMA connector.

DRR is CMOS/LVCMOS compatible:

- \blacksquare V_{II} = 0 (typical)
- \blacksquare $V_{IH} = V_{CCA3}$ (typical)

The active level depends on the Data Ready Reset of 3WSI function (refer to section 4.4.2)

This signal acts as an internal Reset of the device. It is not mandatory for proper operation of the device. It is only used to determine exactly the first data to be sampled.

When applied, the clock outputs are Reset. The Reset pulse should last at least 3.5 ns.

An asynchronous Reset (ASYNCRST push button) should be applied while DRR is active (high) in order to Reset properly the whole device.

In most cases (single channel application, no need to know which data will be the first one to be sampled), this Reset can be left unused.


5.6 DMUX Functions

5.6.1 ASYNCRST

The asynchronous Reset is mandatory to start the device properly. It should be applied after power up of the device.

A push button is provided to perform this Reset and pull-up and pull-down resistors allow to keep the ASYNCRST signal inactive.

Figure 5-2. ASYNCRST

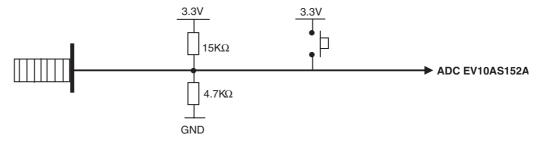

If the DRR Reset is also used, it is recommended to apply the asynchronous Reset while the DRR Reset is active.

The first data is available at the device output after TOD + N cycles (with $4.5 \le N \le 7.5$ depending on DEMUX mode).

5.6.2 CLKDACTRL

A delay cell is provided to allow the user to tune the delay between the Clock and Data at the DMUX input. The delay is controlled via the CLKDACTRL potentiometer.

This cell allows you to delay the internal DMUX clock via the CLKDACTRL potentiometer (varying from $V_{CCD}/3$ to $(2 \times V_{CCD})/3$).

This pin must be biased and it is recommended to set CLKDACTRL at VCCD/3. With this value it is normally not necessary to tune CLKDACTRL voltage over the full specified clock rate.

Figure 5-3. CLKDACTRL Potentiometer



5.6.3 RS, DRTYPE, BIST, SLEEP, STAGG

Seven jumpers are provided for the RS, DRTYPE, BIST, SLEEP and STAGG functions. Table 5-1 describes each function.

Table 5-1. DMUX Function Settings and Description

Function	Description	Jumper Settings
	Ratio selection:	
	- 1:2	1:2: Jumper ON
RS	- 1:4	1:4: Jumper OUT
	Output clock mode:	
	- DR = data valid on each rising edge of the DR/DRN signal	
	- DR/2 = data valid on both rising and falling edges of the	DR: Jumper OUT
DRTYPE	DR/DRN signal	DR/2: Jumper ON
	Built-In Self Test:	
	- Active: checker board pattern available at the device	
	outputs	BIST: Jumper ON
BIST	- BIST inactive: normal mode	No BIST: Jumper OUT
	Sleep mode	
	- Active: the device is in a partial standby mode	SLEEP: Jumper ON
SLEEP	- SLEEP inactive: normal mode	SLEEP inactive: Jumper OUT
	Simultaneous or Staggered output mode	
	- STAGG active: staggered output data	STAGG: Jumper ON
STAGG	- STAGG inactive: simultaneous output data	STAGG inactive: Jumper OUT

EV10AS152A-EB User Guide 5-3

Figure 5-4. DMUX Functions Jumper Positions

Jumper OUT

Jumper ON

Jumper CLKTYPE can be placed in any position: it has no effect.

5.6.4 Additional OR Bits

In simultaneous mode, the out-of-range signal of the ADC is demultiplexed by the DMUX and output on all ports as the (AOR/DRAN, AORN/DRA), (BOR/DRBN, BORN/DRB), (COR/DRCN, CORN/DRC) and (DOR/DRDN, DORN/DRD) signals.

These signals can be used to detect if the input of the ADC is above the full scale.

In staggered mode, these signals correspond to the output clock for each port:

DRA, DRAN for Port A (pins A6, B6)

DRB, DRBN for Port B (pins J2, H1)

DRC, DRCN for Port C (pins W5, V5)

DRD, DRDN for Port D (pins W17, V17)


5.7 Diode for Die Junction Temperature Monitoring

Two diodes for die junction temperature measurement are available, for maximum junction temperature monitoring (hot point measurement) of both the ADC and the DMUX.

The measurement method consists in forcing a 1 mA current into a diode mounted transistor.


The measurement setup is described in Figure 5-5.

Figure 5-5. ADC DIODE Measurement Setup

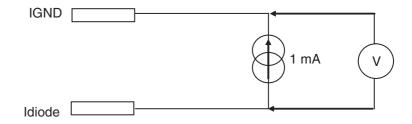

Note: The 1 mA current can be supplied by a multimeter set in this specific current source mode: in this case, the voltage measured between the diode pin and ground is displayed on the multimeter.


Figure 5-6. ADC DIODE Characteristics

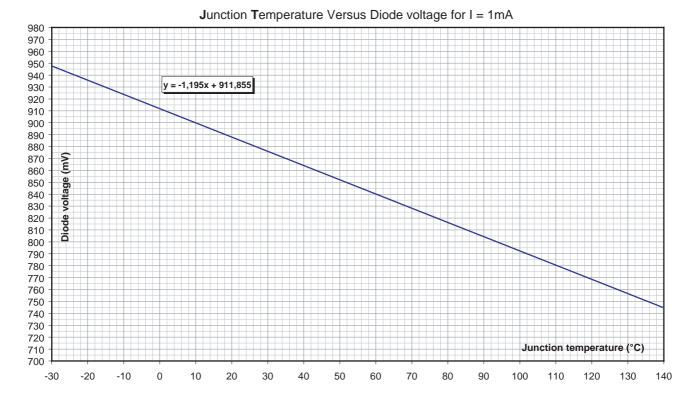

EV10AS152A-EB User Guide 5-5

5.8 Test Bench Description

Figure 5-7. Test Bench Description

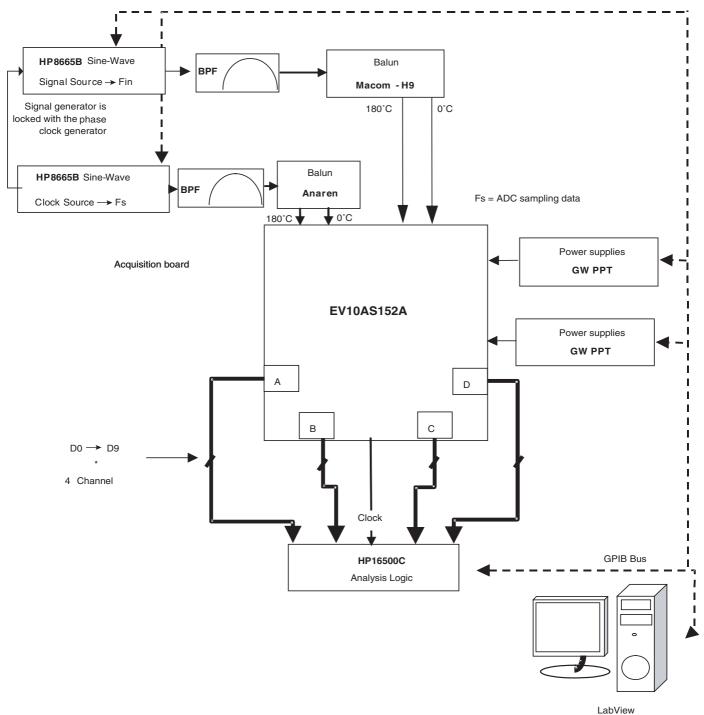

5-6 EV10AS152A-EB User Guide

e₂v

Section 6

Package Information

6.1 Thermal Characteristics

Table 6-1. Thermal Resistance (No air, pure conduction, no radiation)

	Rth junction to bottom of balls	Rth junction to Top of Case	Rth junction to Board ⁽¹⁾	Rth junction to ambient
ADC block ON only	7° C/W	4.1° C/W	8° C/W	17.1° C/W
DMUX block ON only	3.9° C/W	1.5° C/W	4.9° C/W	13.9° C/W

Note: 1. No external heatsink is mandatory.

EV10AS152A-EB User Guide 6-1

Package Information

6-2 EV10AS152A-EB User Guide

e₂v

Section 7

Ordering Information

Part Number	Package	Temperature Range	Screening	Comments
EV10AS152ATP-EB	EBGA 317	Ambient	Prototype	For availability, contact your local e2v sales office.
EV10AS152ACTP	EBGA 317	Commercial grade	T _{amb} > 0° C, T _J < 90° C	For availability, contact your local e2v sales office.
EV10AS152AVTP	EBGA 317	Industrial grade	T _{amb} > -40° C, T _J < 110° C	For availability, contact your local e2v sales office.
EV10AS152ACTPY	EBGA 317	Commercial grade RoHS	T _{amb} > 0° C, T _J < 90° C	For availability, contact your local e2v sales office.
EV10AS152AVTPY	EBGA 317	Industrial grade RoHS	T _{amb} > -40° C, T _J < 110° C	For availability, contact your local e2v sales office.


Ordering Information

Section 8

Appendix


8.1 EV10AS152A-EB Electrical Schematics

Figure 8-1. Decoupling PIN

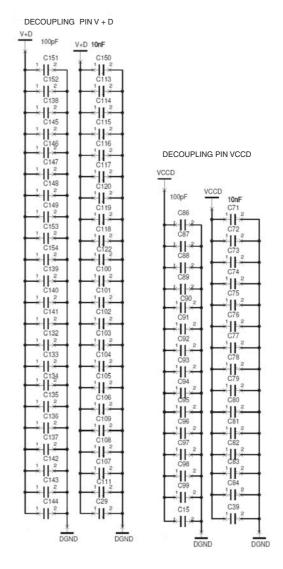

Note: 1. For ADC decoupling strategy, please do not take into account the current decoupling implemented on current evaluation board which is purely experimental. Refer to Datasheet for recommended decoupling strategy.


Figure 8-2. Decoupling PIN V_{CCA3}

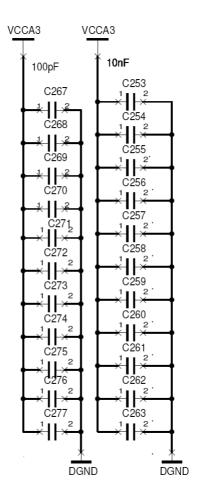

Note: 1. For ADC decoupling strategy, please do not take into account the current decoupling implemented on current evaluation board which is purely experimental. Refer to Datasheet for recommended decoupling strategy.

8-2 EV10AS152A-EB User Guide

Figure 8-3. Decoupling PIN V_{CCA5}

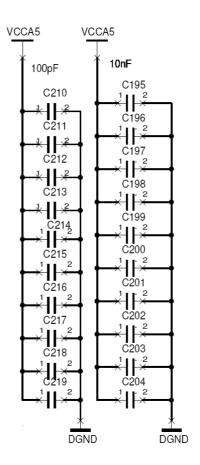

Note: 1. For ADC decoupling strategy, please do not take into account the current decoupling implemented on current evaluation board which is purely experimental. Refer to Datasheet for recommended decoupling strategy.

Figure 8-4. Power Supplies Connections

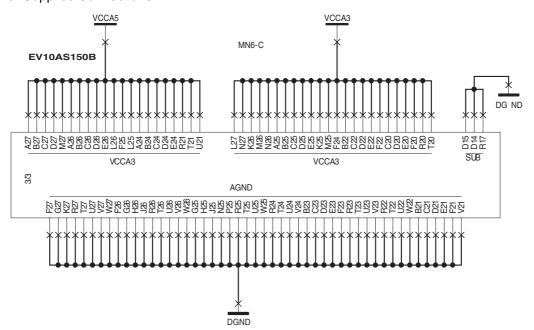


Figure 8-5. Power Supplies Bypassing



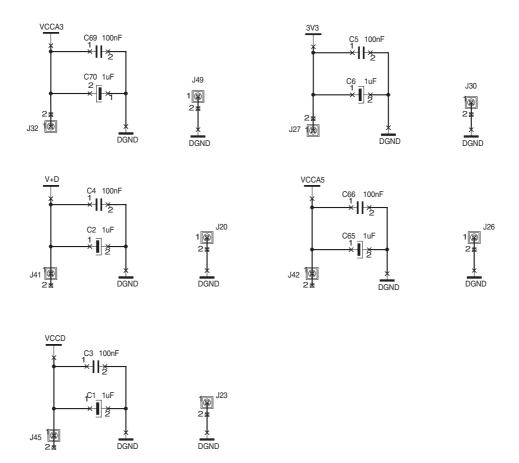


Figure 8-6. EV10AS152A-EB Electrical Schematic (ADC DMUX)

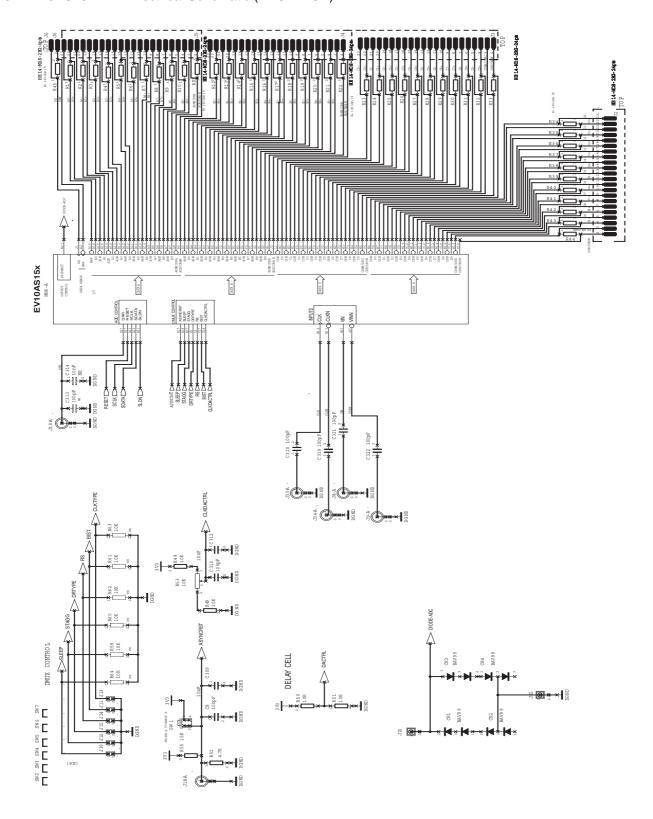


8-6 EV10AS152A-EB User Guide

Figure 8-7. EV10AS152A-EB Electrical Schematic (AVR)

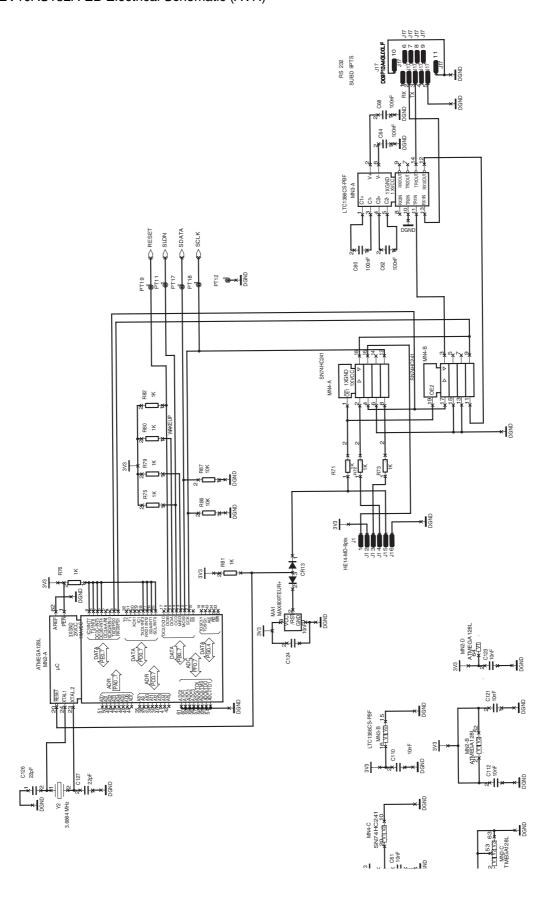

8.2 EV10AS152A-EB Board Layers

Figure 8-8. Top Layer

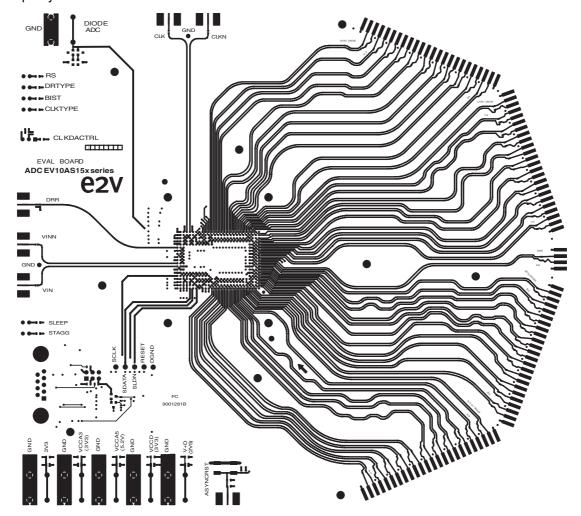

8-8 EV10AS152A-EB User Guide

Figure 8-9. Bottom Layer



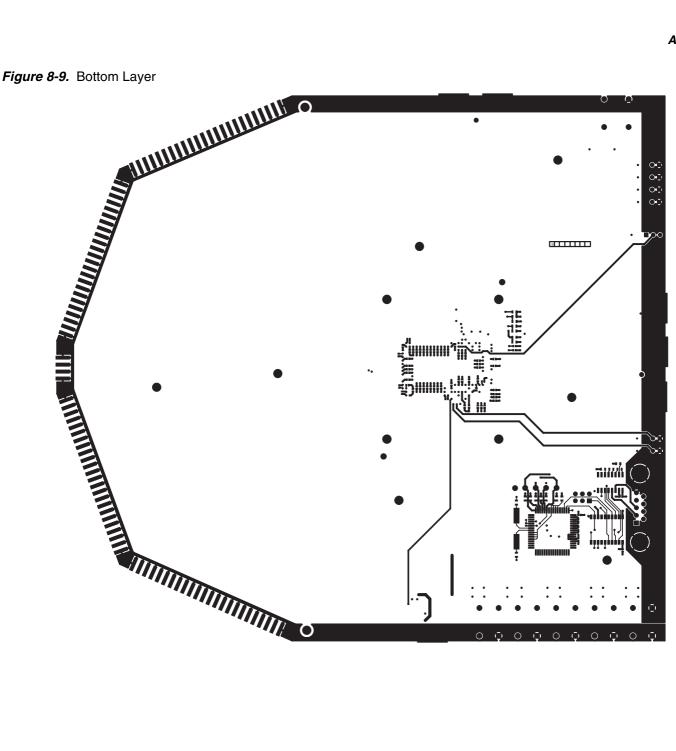


Figure 8-10. Board Equipped with Socket (Top)

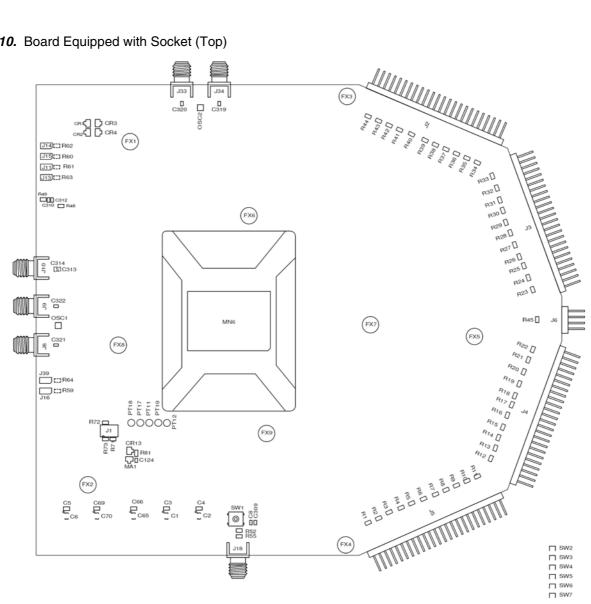

8-10 EV10AS152A-EB User Guide

Figure 8-11. Equipped Board (Bottom)

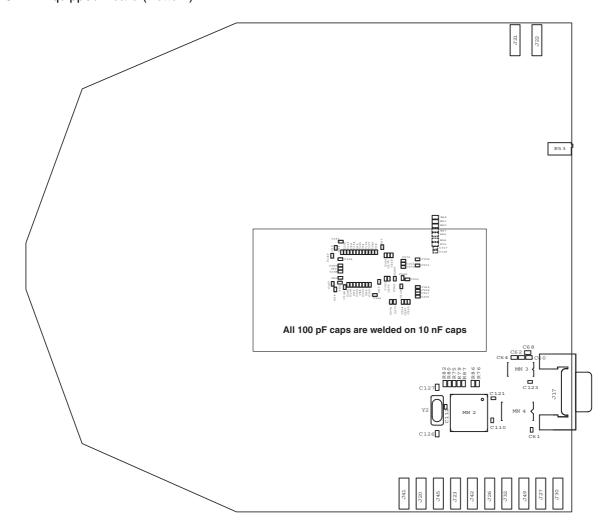

8-12 EV10AS152A-EB User Guide

e2V

How to reach us

Home page: www.e2v.com

Sales offices:

Europe Regional sales office

e2v ltd

106 Waterhouse Lane

Chelmsford Essex CM1 2QU

England

Tel: +44 (0)1245 493493 Fax: +44 (0)1245 492492 mailto: enquiries@e2v.com

e2v sas

16 Burospace

F-91572 Bièvres Cedex

France

Tel: +33 (0) 16019 5500 Fax: +33 (0) 16019 5529

mailto: enquiries-fr@e2v.com

e2v Aerospace and defense inc

765 Sycamore Drive

Milpitas

California 95035

USA

Tel: +33 (0) 1 408 737 0992 Fax: +33 (0) 1 408 736 8708

mailto: e2v-us.com

Americas

e2v inc

520 White Plains Road

Suite 450 Tarrytown, NY 10591

USA

Tel: +1 (914) 592 6050 or 1-800-342-5338,

Fax: +1 (914) 592-5148

mailto: enquiries-na@e2v.com

Asia Pacific

e2v Itd

11/F.,

Onfem Tower,

29 Wyndham Street,

Central, Hong Kong

Tel: +852 3679 364 8/9

Fax: +852 3583 1084

mailto: enquiries-ap@e2v.com

Product Contact:

e2v

Avenue de Rochepleine

BP 123 - 38521 Saint-Egrève Cedex

France

Tel: +33 (0)4 76 58 30 00

Hotline:

mailto: hotline-bdc@e2v.com

Whilst e2v has taken care to ensure the accuracy of the information contained herein it accepts no responsibility for the consequences of any use thereof and also reserves the right to change the specification of goods without notice. e2v accepts no liability beyond that set out in its standard conditions of sale in respect of infringement of third party patents arising from the use of tubes or other devices in accordance with information contained herein.

e2v semiconductors SAS 2012 1108A-BDC-12/12